

1.	PRECAUTIONS FOR SAFETY AND USE	4
2.	INSTALLING THE APPLIANCE	6
3.	ADAPTING TO DIFFERENT TYPES OF GAS	10
4.	FINAL OPERATIONS	15
5.	DESCRIPTION OF FRONT PANEL CONTROLS	17
6.	USING THE HOB	19
7.	USING THE OVEN	22
8.	ELECTRONIC PROGRAMMER (ON SOME MODELS ONLY)	26
9.	DIGITAL TIMER (ON SOME MODELS ONLY)	28
10.	ANALOGUE CLOCK (ON SOME MODELS ONLY)	28
11.	CLEANING AND MAINTENANCE	29
12.	EXTRAORDINARY MAINTENANCE	31



THESE INSTRUCTIONS ONLY APPLY TO THE COUNTRIES OF DESTINATION WHOSE IDENTIFICATION SYMBOLS ARE LISTED ON THE COVER OF THIS MANUAL.



INSTRUCTIONS FOR THE INSTALLER: these are intended for the **qualified engineer** who is to check the gas supply system and install, commission and test the appliance.



 
INSTRUCTIONS FOR THE USER: these provide recommendations for use, a description of the controls and the correct procedures for cleaning and maintaining the appliance.

1. PRECAUTIONS FOR SAFETY AND USE




THIS MANUAL IS AN INTEGRAL PART OF THE APPLIANCE. TAKE GOOD CARE OF IT AND KEEP IT TO HAND THROUGHOUT THE COOKER'S LIFE CYCLE. WE URGE YOU TO READ THIS MANUAL AND ALL THE INFORMATION IT CONTAINS CAREFULLY BEFORE USING THE COOKER. ALSO KEEP THE SET OF NOZZLES PROVIDED IN A SAFE PLACE. INSTALLATION MUST BE CARRIED OUT BY QUALIFIED STAFF IN COMPLIANCE WITH THE RELEVANT REGULATIONS. THIS APPLIANCE IS INTENDED FOR HOUSEHOLD USE AND COMPLIES WITH THE **EEC DIRECTIVES** CURRENTLY IN FORCE. THE APPLIANCE IS BUILT TO PROVIDE THE FOLLOWING FUNCTION: **COOKING AND HEATING FOODS**; ALL OTHER USES ARE TO BE CONSIDERED IMPROPER.


THE MANUFACTURER DECLINES ALL LIABILITY FOR USES OTHER THAN THOSE STATED ABOVE.



 NEVER LEAVE PACKAGING RESIDUES UNATTENDED IN THE HOME. SEPARATE WASTE PACKAGING MATERIALS BY TYPE AND CONSIGN THEM TO THE NEAREST SEPARATE DISPOSAL CENTRE.



 THE APPLIANCE MUST BE CONNECTED TO EARTH IN COMPLIANCE WITH ELECTRICAL SYSTEM SAFETY REGULATIONS.



THE PLUG TO BE CONNECTED TO THE POWER SUPPLY LEAD AND THE RELATIVE SOCKET MUST BE OF THE SAME TYPE AND COMPLY WITH THE RELEVANT REGULATIONS. THE POWER SUPPLY SOCKET MUST BE ACCESSIBLE EVEN AFTER THE APPLIANCE HAS BEEN BUILT-IN.

NEVER DISCONNECT THE PLUG BY PULLING ON THE POWER SUPPLY LEAD.



IMMEDIATELY AFTER INSTALLATION, CARRY OUT A QUICK TEST ON THE APPLIANCE FOLLOWING THE INSTRUCTIONS PROVIDED LATER IN THIS MANUAL. IF THE APPLIANCE FAILS TO OPERATE, DISCONNECT IT FROM THE ELECTRICAL MAINS AND CONTACT YOUR NEAREST SERVICE CENTRE.

 
NEVER ATTEMPT TO REPAIR THE APPLIANCE.



AFTER EACH USE, ALWAYS CHECK THAT THE CONTROL KNOBS ARE TURNED TO THE (OFF) POSITION.



NEVER PLACE INFLAMMABLE OBJECTS IN THE OVEN: IF IT SHOULD ACCIDENTALLY BE SWITCHED ON, THIS MIGHT CAUSE A FIRE.



THE NAMEPLATE WITH THE TECHNICAL DATA, SERIAL NUMBER AND MARK IS IN A VISIBLE POSITION INSIDE THE STORAGE COMPARTMENT. THE NAMEPLATE MUST NEVER BE REMOVED.



NEVER PLACE PANS WITH BOTTOMS WHICH ARE NOT PERFECTLY FLAT AND SMOOTH ON THE HOB PAN STANDS



NEVER USE PANS OR GRIDDLE PLATES WHICH PROJECT BEYOND THE OUTSIDE EDGE OF THE HOB.

Presentation

GB-IE



ALWAYS KEEP HOLD OF THE HOB'S GLASS LID WHEN LOWERING IT.

WARNING: THE GLASS LID MAY SHATTER IF OVERHEATED.

TURN OFF ALL THE BURNERS AND WAIT FOR THEM TO COOL BEFORE CLOSING IT.



THE APPLIANCE BECOMES VERY HOT DURING USE. TAKE CARE NOT TO TOUCH THE HEATING ELEMENTS INSIDE THE OVEN.



THE APPLIANCE IS INTENDED FOR USE BY ADULTS. KEEP CHILDREN AT A SAFE DISTANCE AND NEVER ALLOW THEM TO PLAY WITH IT.

WHEN THE GRILL IS IN OPERATION, ACCESSIBLE PARTS MAY BECOME VERY HOT: **KEEP CHILDREN AT A SAFE DISTANCE.**



IF THE APPLIANCE IS MOUNTED ON A STAND, IT MUST BE INSTALLED IN SUCH A WAY THAT IT CANNOT SLIP OFF.



INSTALL THE APPLIANCE SO THAT WHEN DRAWERS OR DOORS OF UNITS INSTALLED AT HOB HEIGHT ARE OPENED, ACCIDENTAL CONTACT WITH PANS ON THE HOB IS NOT POSSIBLE.



THIS APPLIANCE IS TAGGED UNDER EUROPEAN DIRECTIVE 2002/96/EC ON WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT (WEEE).

THIS DIRECTIVE CONTAINS THE REGULATIONS GOVERNING THE COLLECTION AND RECYCLING OF DECOMMISSIONED APPLIANCES THROUGHOUT THE EUROPEAN UNION.



BEFORE THE APPLIANCE IS PUT INTO OPERATION, ALL THE LABELS AND PROTECTIVE FILMS APPLIED INSIDE OR OUTSIDE MUST BE REMOVED.



The manufacturer declines all responsibility for injury or damage caused by failure to comply with the above regulations or deriving from tampering with even just one part of the appliance and the use of non-original spare parts.




2. INSTALLING THE APPLIANCE




The appliance must be installed by a qualified engineer in compliance with the relevant regulations. Depending on the type of installation, it is in class 1 (Fig. A) or class 2 - sub-class 1 (Fig. B-C).


It may be installed against walls one of which is higher than the worktop surface, at least 50 mm from the side of the appliance, as shown in the installation class drawings A and B. Wall units or extractor hoods installed above the appliance's work-top must be at least 750 mm above it.

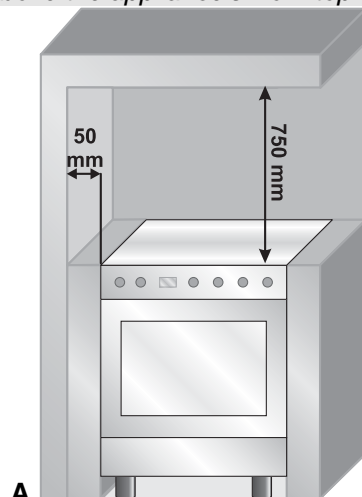


A
Built-in Appliance

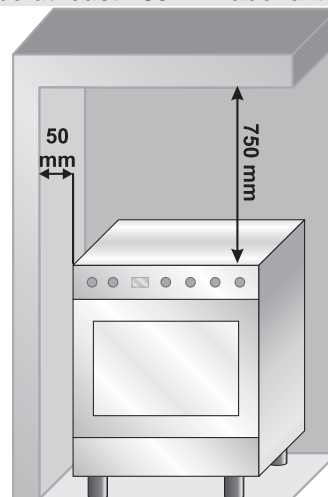

B
Free-Standing Installation

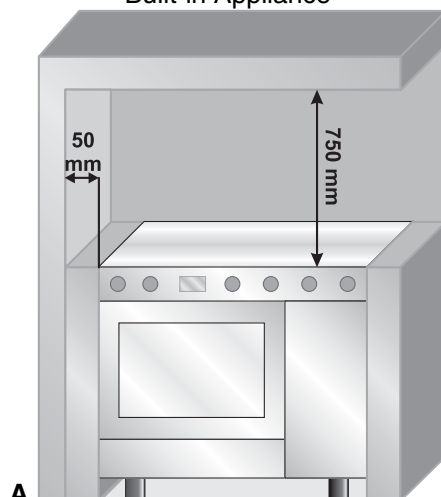

A
Built-in Appliance

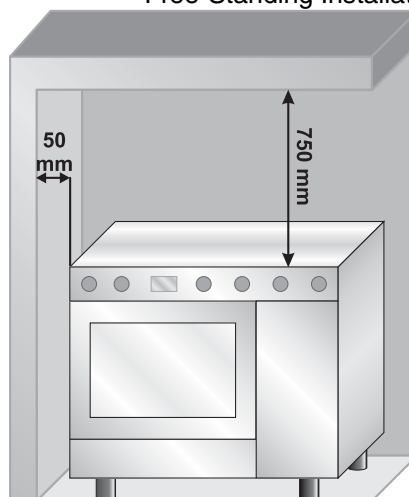

B
Free-Standing Installation



C



Appliances with gas cylinder compartment and electric oven may only be installed in free-standing mode (see fig. B).



Instructions for the Installer

GB-IE

2.1 Electrical connection

 


Check that the voltage and size of the power supply line are as specified on the nameplate inside the storage compartment.

This nameplate must never be removed.



If a permanent connection to the electrical mains is used, the appliance's power supply line must be fitted with an omnipolar breaking device with contact breaking gap of at least **3 mm** located in an easily accessible position close to the appliance itself.




The mains connection may be permanent or by means of a plug and socket. If a plug and socket connection is used, suitable cable compliant with the relevant standards must be used. For each type of connection, the appliance must always be connected to earth. Before connecting it, check that the power supply line is properly earthed. The use of reductions, adapters or junctions is not recommended.




If the power supply cable has to be replaced, the gauge of the wires in the new cable must be at least 1.5 mm^2 (3 x 1.5 cable), bearing in mind that the earth wire (yellow-green) must be at least 20 mm longer at the end for connection to the appliance. For models with electric plates, the cable must have cross-section of at least 2.5 mm^2 (3 x 2.5 cable). The cable must be replaced by a qualified electrician, who must make the mains connection as shown on the right.

L = brown

N = blue

 = yellow-green.

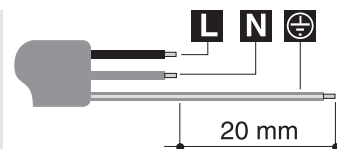

2.2 Room ventilation



The appliance may only be installed in a permanently ventilated room as specified by the relevant regulations. The air flow into the room where the appliance is installed must be sufficient for proper gas combustion and room ventilation. The air intakes, protected by gratings, must be of suitable size (see relevant regulations) and located so that they cannot be even partially obstructed.

The kitchen must be kept properly ventilated to disperse the heat and humidity produced by cooking processes: in particular, a window should be opened or the speed of any fans increased after prolonged use.

2.3 Combustion gas discharge




Combustion gases must be discharged by means of hoods connected to a flue with reliable natural draught, or a fan extraction system. An effective extraction system requires careful design by an authorised specialist, and must comply with the regulation distances and positions. After installation, the engineer must issue a certificate of compliance.



2.4 Gas connection

2.4.1 Connection with rubber hose

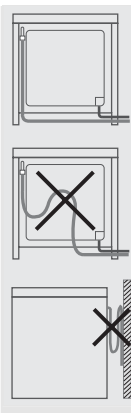

When connecting with a rubber hose (which must be compliant with the relevant standards), ensure that the total length of the pipeline is not more than 1.5 metres; also ensure that the hose does not touch moving parts and is not crushed. The inside diameter of the hose must be 8 mm for BOTTLED GAS and 13 mm for NATURAL GAS and TOWN GAS.

Check that all the conditions listed below are met:

- the hose must be fixed to the hose connector with a safety band clamp;
- the hose does not touch hot surfaces at any point (max. 50 °C);
- there are no traction forces or stresses acting on the hose and there are no tight bends or kinks along its length;
- the hose does not touch sharp components or edges;
- if the hose is not perfectly gastight and causes gas leaks, **do not attempt to repair it**: replace it with a new hose;
- check that the hose's expiration date, screen-printed on it, has not been passed.




CONNECTION USING RUBBER HOSES COMPLIANT WITH THE RELEVANT STANDARDS IS ONLY PERMITTED IF THE HOSE IS ACCESSIBLE FOR INSPECTION ALONG ITS ENTIRE LENGTH.

2.4.2 Natural and town gas connection


Make the connection to the gas main using a rubber hose compliant with the specifications provided in the relevant standard (check that the hose is marked with the code of this standard).

Screw the hose connector **A** on to the appliance's gas union **B** fitting the seal **C** between them. Fit the hose **D** onto the hose connector **A** and secure it with the band clamp **E** compliant with the relevant standards.

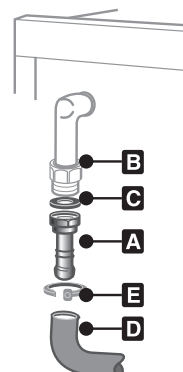

2.4.3 Connecting to the gas cylinder in the compartment inside the appliance (on some models only)

Open the compartment in the side of the appliance and place a gas cylinder of no more than 15 kg inside. Fit one end of the hose onto the hose connector and secure it with one of the two hose clamps provided. Insert the hose into the gas cylinder compartment through the hole on the rear of the appliance, as shown on the right. Fit the other end of the hose onto the gas cylinder pressure regulator and secure it with the other hose clamp provided. **Check for any leaks with a soapy solution, never with a naked light.**

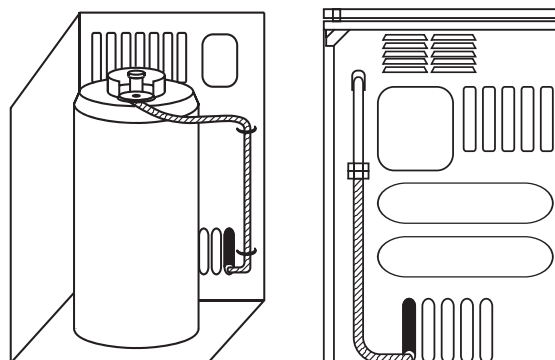

The connection between the cooker and the gas cylinder must be made using a piece of hose compliant with the relevant standards and at least 1.4 m long.



Instructions for the Installer

GB-IE


2.4.4 Bottled gas connection



Use a pressure regulator compliant with the relevant standards and make the connection to the gas cylinder in accordance with the relevant regulations.

Make sure that the gas supply pressure is as stated in the table in point "3.2/3.3 Burner and Nozzle Data Tables".

Screw the small hose connector **F** onto the large hose connector **A** and connect the resulting unit to the gas union **B** (or use the hose connector **G** for connection straight to the gas union **B**) and fit the seal **C**. Fit the ends of the rubber hose **H** onto the hose connector **A+F** (or **G**) and to the outlet union of the pressure reducer on the gas cylinder. Fix the end of the hose **H** to the hose connector **A+F** (or **G**) using the regulation hose clamp **I**.

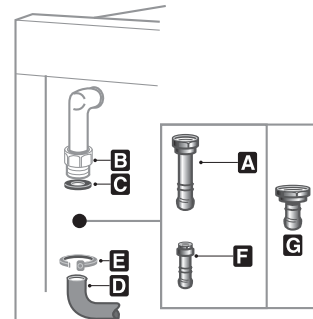


*The hose connector **G** shown is not supplied with the appliance. Use only hose connectors compliant with the relevant regulations.*

2.4.5 Connection with steel hose (for all types of gas)

This type of connection can be made on both built-in and free-standing appliances. Use only regulation steel hoses no more than 2 metres long. Screw the end of the hose **L**, fitting the seal **C**, onto the gas union **B** with external 1/2" gas thread (ISO 228-1).

When installation is complete, check for any leaks with a soapy solution, never with a naked light.

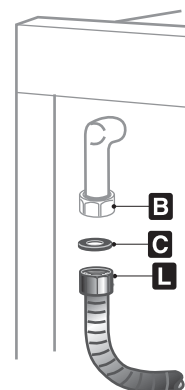



3. ADAPTING TO DIFFERENT TYPES OF GAS



Before carrying out the operations described below, disconnect the appliance from the electricity supply.


The appliance is tested with **G20 (2H) natural gas** at the pressure of 20 mbar. If it is to be used with other types of gas, the burner nozzles have to be changed and the gas tap adjusted to set the minimum flame. In addition, the primary air flow of the gas oven burner has to be adjusted (3.6.2 Adjusting oven burner primary air flow). To replace the nozzles, proceed as described below.

3.1 Changing the hob nozzles

1. Remove the pan stands, all the burner caps and the flame diffuser rings
2. Use a 7 mm socket wrench to unscrew the burner nozzles;
3. Replace the burner nozzles depending on the type of gas to be used (see point "3.2/3.3 Burner and Nozzle Data Tables").
4. Put the burners back into place correctly.



Nozzles for the use of town gas (G110 – 8 mbar) are available from authorised service centres.

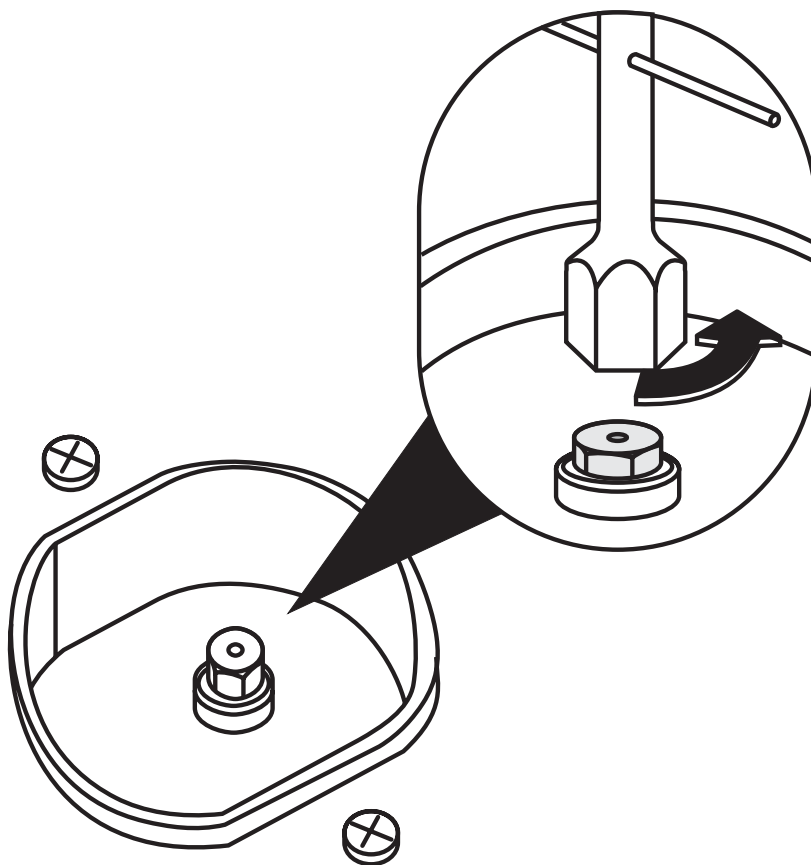



Instructions for the Installer

GB-IE

3.2 Burner and Nozzle Data Tables (50-60 cm Models)

Burner	Rated heat capacity (kW)	BOTTLED GAS – G30/G31 30/37 mbar				
		Nozzle diameter 1/100 mm	By-pass mm 1/100	Reduced heat capacity (W)	Flow-rate g/h G30	Flow-rate g/h G31
Auxiliary	1.0	50	30	350	73	71
Semi-rapid	1.75	65	33	450	127	125
Rapid (3)	3.0	85	45	800	218	214
Rapid (5)	2.3	75	45	800	167	164
Triple Flame	3.2	91	65	1500	233	229
Oven	3.2	87	48	850	233	229
Grill	3.0	87	//	//	218	214

Burner	Rated heat capacity (kW)	TOWN GAS – G110 8 mbar	
		Nozzle Diameter 1/100 mm	Reduced heat capacity (W)
Auxiliary	1.0	145	350
Semi-rapid	1.75	185	450
Rapid (3)	3.0	260	800
Rapid (5)	2.3	220	800
Triple Flame	3.3	290	1200
Oven	3.2	270	850

The data for town gas refer to category III 1a2H3+ appliances.

Burner	Rated heat capacity (kW)	NATURAL GAS - G20 20 mbar	
		Nozzle Diameter 1/100 mm	Reduced heat capacity (W)
Auxiliary	1.0	72	350
Semi-rapid	1.75	97	450
Rapid (3)	3.0	115	800
Rapid (5)	2.3	103	800
Triple Flame	3.5	133	1500
Oven	3.2	130	850
Grill	3.0	130	//



3.3 Burner and Nozzle Data Tables (90 cm Models)

Burner	Rated heat capacity (kW)	BOTTLED GAS - G30/G31 30/37 mbar				
		Nozzle diameter 1/100 mm	By-pass mm 1/100	Reduced heat capacity (W)	Flow-rate g/h G30	Flow-rate g/h G31
Auxiliary	1	50	30	350	73	71
Semi-rapid	1.75	65	33	450	127	125
Rapid	3	85	45	800	218	214
Triple Flame	3.2	91	65	1500	233	229
Fish	1.9	68	45	800	138	136
Oven	3.2	87	48	850	233	229
Maxi oven	5.2	110	59	1200	378	371
Grill	2.9	87	//	//	218	214
Maxi grill	4.0	100	//	//	291	286

Burner	Rated heat capacity (kW)	TOWN GAS – G110 8 mbar	
		Nozzle diameter 1/100 mm	Reduced heat capacity (W)
Auxiliary	1	145	350
Semi-rapid	1.75	190	450
Rapid	3	260	800
Triple Flame	3.5	290	1500
Fish	1.9	190	800

G110 gas cannot be used in models with gas oven.

The data for town gas refer to category III 1a2H3+ appliances.


Burner	Rated heat capacity (kW)	NATURAL GAS - G20 20 mbar	
		Nozzle diameter 1/100 mm	Reduced heat capacity (W)
Auxiliary	1	72	350
Semi-rapid	1.75	97	450
Rapid	3	115	800
Triple Flame (4)	3.5	133	1500
Triple Flame (8)	3.5	140	1500
Fish	1.9	94	800
Oven	3.2	130	850
Maxi oven	5.2	164	1200
Grill	2.9	130	//
Maxi grill	4.0	150	//




Instructions for the Installer

GB-IE

3.4 Hob burner layout

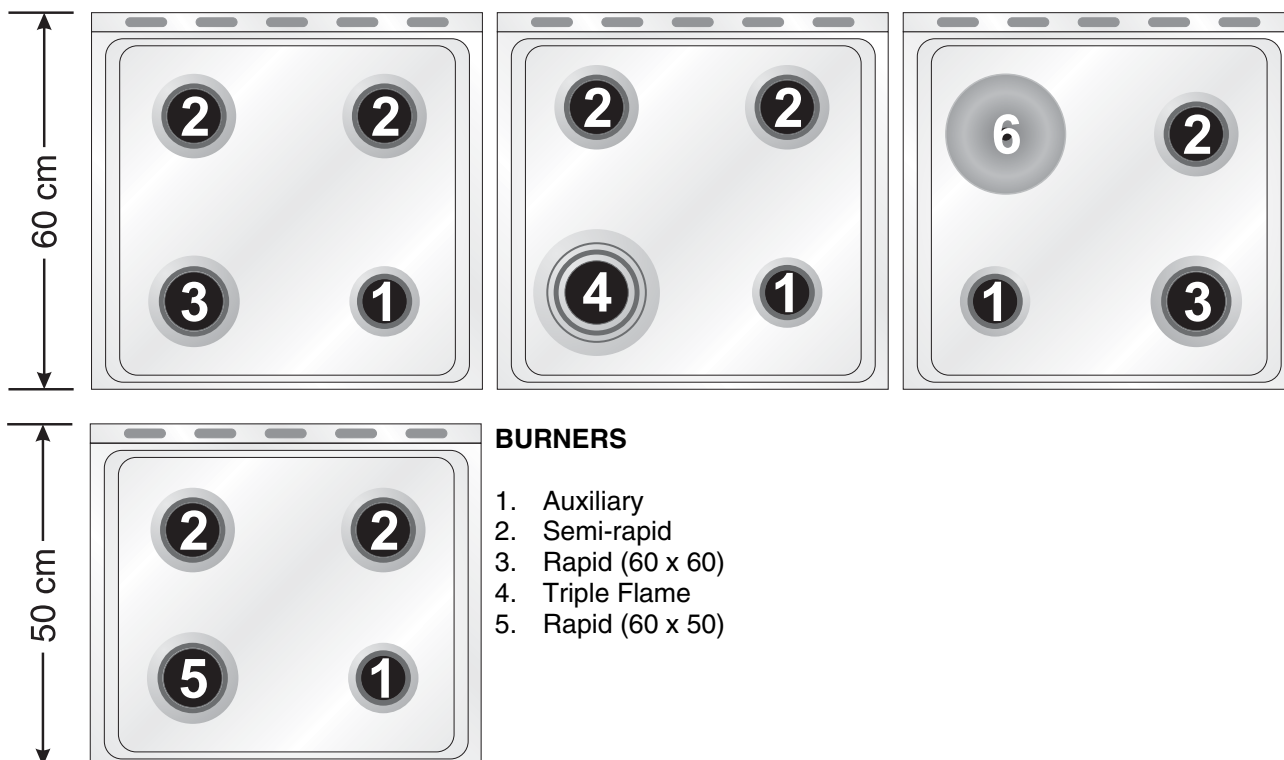

3.5 Hob burner layout

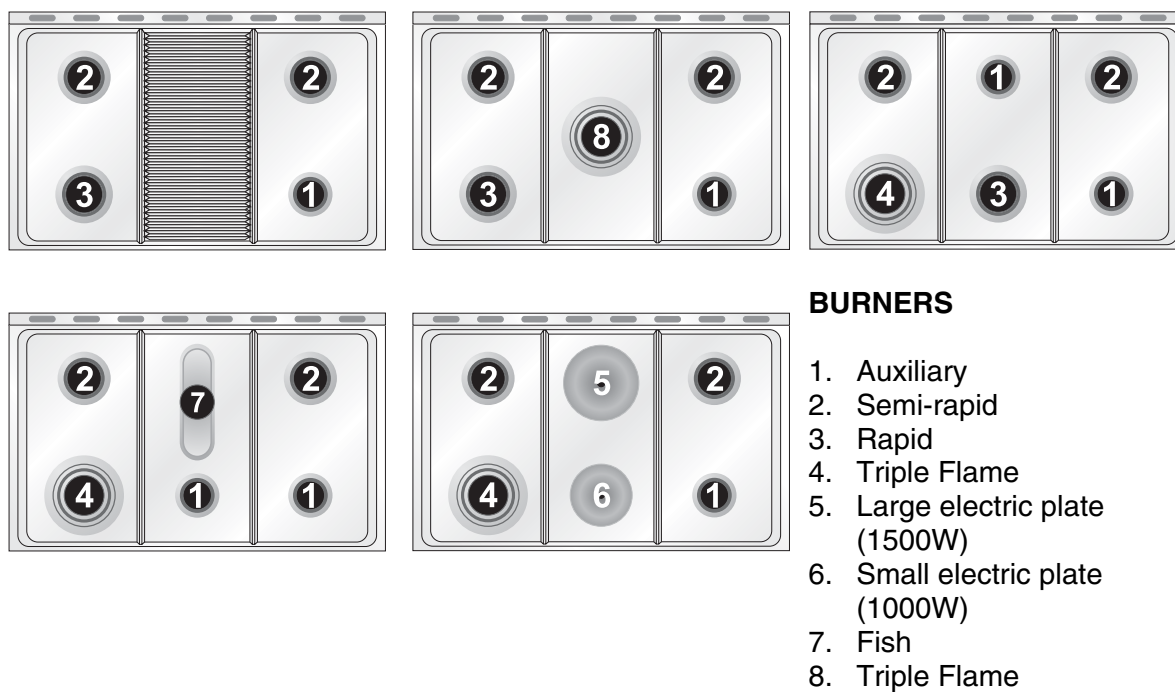



3.6 Adjusting the oven burner (for gas oven models only)


To adjust the oven burner, open the oven door and proceed as follows:

- Remove the oven tray and its shelf.
- Lift and extract the oven bottom.




3.6.1 Changing the oven + grill burner nozzle

- Undo the oven burner fixing screw **A**.
- Push the burner **B** to the right until the nozzle is accessible.
- Use a 13 socket wrench to change the nozzle, fitting the one for the type of gas to be used (see point "3.2/3.3 Burner and Nozzle Data Tables").

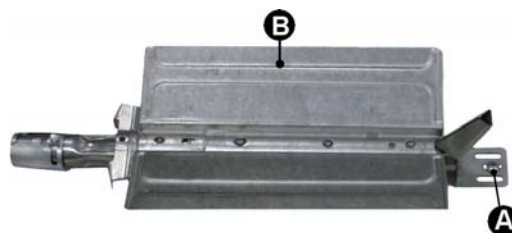

3.6.2 Adjusting the oven+grill burner primary air flow

- Undo the adjuster screw **"A"** of the air regulator sleeve.
- Turn the regulator sleeve **"B"** into the position for the type of gas to be used, consulting the table below.
- Tighten the adjuster screw and restore the seals.
- When the operation is complete, reassemble the burner correctly.

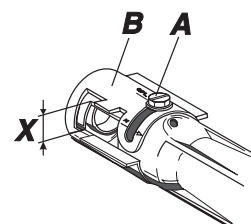

	NATURAL GAS (N)	G30/G31 (LPG) 90 cm Oven	G30/G31 (LPG) 60cm Oven	G 110 – TOWN GAS
X =	5 mm	15 mm	10 mm	3 mm



Instructions for the Installer

GB-IE


4. FINAL OPERATIONS

After changing the nozzles, put the pan stands, the burner caps and flame diffuser rings back in place.




After adjusting for use of a gas other than the gas used for testing the appliance, replace the gas setting label on the appliance with the label for the new gas. The label is supplied in the bag with the nozzles.

4.1 Adjusting the hob burner minimum for town gas and natural gas

Light the burner and turn it to the minimum setting . Remove the gas tap knob and adjust the regulator screw beside the tap rod until an even minimum flame is obtained.

Put the knob back in place and check the stability of the burner flame (the flame must not go out when the knob is turned quickly from the maximum to the minimum setting). Repeat the operation on all the gas taps.

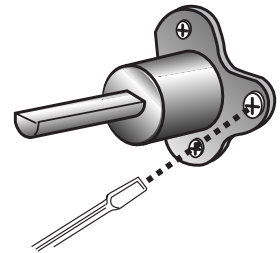

On models equipped with valves, keep the knob pressed down on the minimum setting for a few seconds to keep the flame alight and prime the safety device.

4.2 Adjusting the hob burner minimum for bottled gas

To adjust the minimum level when using bottled gas, the adjuster screw beside the tap rod must be turned fully clockwise.

The diameters of the bypasses for each individual burner are stated in point "3.2/3.3 Burner and Nozzle Data Tables". When the adjustment is complete, re-seal the bypasses with paint or another similar material.

4.3 Adjusting the oven burner minimum

The oven thermostat has a screw for regulating the minimum setting, accessed by removing the thermostat knob.


When the type of gas used changes, the minimum setting must be adjusted as follows:

- Light the oven burner and keep it operating at the highest setting for 10/15 minutes with the door closed and without the hob. Now turn the knob to the minimum temperature setting, remove the knob and use a straight-head screwdriver to adjust.
- When using bottled gas, the adjuster screw must be turned fully clockwise. The diameter of the by-pass is stated in point "3.2/3.3 Burner and Nozzle Data Tables".
- When using town or natural gas, adjust the screw so that when the thermostat knob is turned from the maximum to the minimum setting, the flame always remains stable and uniform. When the adjustment is complete, re-seal the screw with paint or equivalents. Close the oven door and check that the burner remains on at the minimum setting.




4.4 Fitting the rear splash-back (on some models only)

- Unscrew the nuts **B**.
- Place the splash-back on the hob, aligning the rods **C** with the holes **D**.
- Fix the splash-back to the hob by tightening the screws **A**.

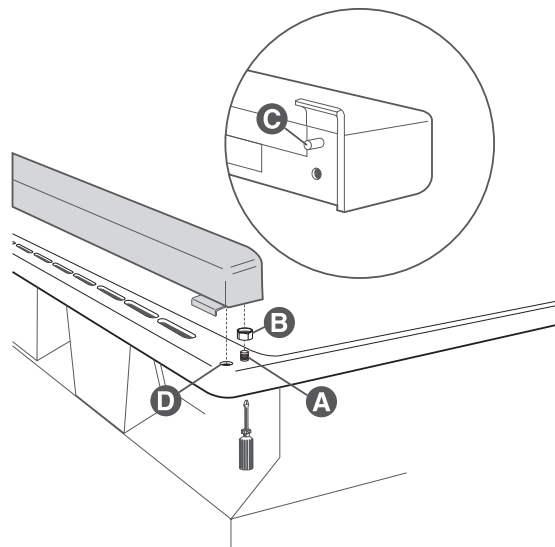

4.5 Wall fixing (on some models only)

- Stretch out the chain attached to the cooker horizontally so that the other end touches the wall.
- Mark the wall in the position where the hole is to be drilled.
- Drill the hole, insert a wall plug and attach the chain.
- Move the cooker up against the wall.

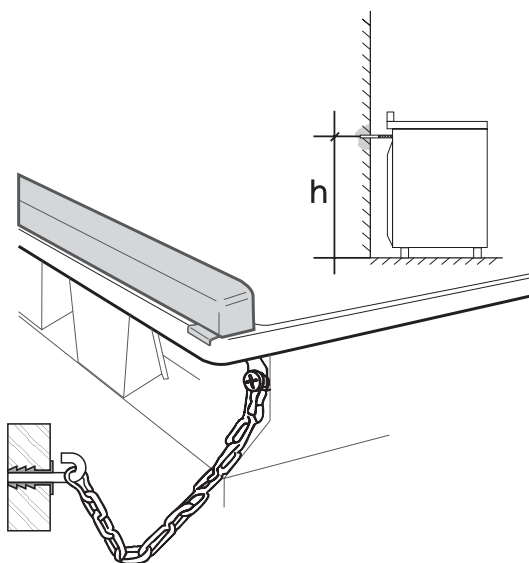

4.6 Positioning and levelling the appliance



After making the electrical and gas connections, level the oven by means of its four adjustable feet. For good cooking results, the appliance must be properly levelled. Depending on the model you have purchased, the foot height adjustment range may vary from 70 to 95 mm and from 110 to 160 mm. These heights refer to the distance between the highest point of the foot (fixed part) and the lowest point (movable part which rests on the floor).



Instructions for the User

5. DESCRIPTION OF FRONT PANEL CONTROLS

All the cooker's control and monitoring devices are placed together on the front panel. The table below provides the key to the symbols used.

		FRONT RIGHT-HAND BURNER		CENTRAL BURNER
		REAR RIGHT-HAND BURNER		GAS OVEN THERMOSTAT
		REAR LEFT-HAND BURNER		ELECTRIC OVEN THERMOSTAT
		FRONT LEFT-HAND BURNER		ELECTRIC OVEN FUNCTION KNOB
		REAR CENTRAL BURNER		BURNER IGNITION BUTTON
		FRONT CENTRAL BURNER		OVEN LIGHT SWITCH



If the cooker is equipped with an electronic programmer, before using the oven check that the symbol appears on the display; see point "8.1 Setting the time".

BURNER IGNITION BUTTON (ON SOME MODELS ONLY)

On models fitted with this button, to light the flame, turn the burner ignition knob anti-clockwise to the minimum flame symbol while pressing it down. To adjust the flame, turn the knob to the zone between the maximum and the minimum settings. To turn off the burner, turn the knob to the position.



HOB BURNER CONTROL KNOB


On models without burner ignition button, to light the flame press down the knob and turn it anti-clockwise to the minimum flame setting . To adjust the flame, turn the knob to the zone between the maximum and the minimum settings. To turn off the burner, turn the knob to the position.



GAS OVEN THERMOSTAT AND GRILL ELEMENT KNOB (ON SOME MODELS ONLY)

This knob turns on the gas supply to light the burner inside the oven, or operates the grill/roast function. The gas oven cooking temperature is set by turning the knob anti-clockwise to the value required, between **Min.** and **275°C**.

For instructions for lighting the gas oven, refer to point "7.2 Using the gas oven".

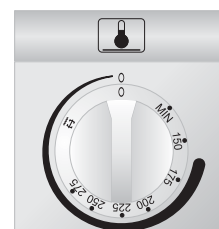

Instructions for the User



ELECTRIC OVEN THERMOSTAT KNOB (ON SOME MODELS ONLY)

The cooking temperature is selected by turning the knob clockwise to the required setting, between **50°** and **260°C**.

The orange light comes on to indicate that the oven is heating up. This light goes out when the set temperature is reached. When it flashes at regular intervals, the temperature inside the oven is being kept constantly at the set level.



STATIC ELECTRIC OVEN FUNCTION KNOB (ON SOME MODELS ONLY)

The electric oven's various functions are suitable for different cooking modes. After selecting the function required, set the cooking temperature using the thermostat knob.



OVEN LIGHT



WIDE GRILL FUNCTION



STATIC OVEN FUNCTION



GRILL FUNCTION



BOTTOM HEATING ELEMENT
FUNCTION



GRILL + ROTISSERIE FUNCTION (ON
MODELS WITH ROTISSERIE)

FAN ELECTRIC OVEN FUNCTION KNOB (ON SOME MODELS ONLY)

The electric oven's various functions are suitable for different cooking modes. After selecting the function required, set the cooking temperature using the thermostat knob.



OVEN LIGHT



GRILL + FAN FUNCTION



STATIC OVEN FUNCTION



BOTTOM HEATING ELEMENT + FAN
FUNCTION



GRILL FUNCTION



FAN OVEN FUNCTION

OVEN LIGHT SWITCH (ON SOME MODELS ONLY)

This switch can be used to turn on the light inside the oven at any moment.



TIMER KNOB (ON SOME MODELS ONLY)

To use the timer, set the buzzer by turning the knob clockwise.

The numbers correspond to minutes (maximum 55 minutes).

Setting is on a gradual scale and intermediate positions between the numbers can be used. The end of cooking buzzer does not turn off the oven.





Instructions for the User

GB-IE

6. USING THE HOB

6.1 Lighting the hob burners



Before lighting the hob burners check that the flame diffuser rings are correctly in place with their respective burner caps, making sure that the holes **A** in the flame diffusers are aligned with the plugs and thermocouples.


Before lighting the burners **lift the glass lid**; before closing it again, turn off all the burners and wait for them to cool.




The optional reducer **B** is for use with woks.

To prevent damage to the hob, the cooker comes complete with a raised pan stand **C** for use underneath pans more than 26 cm in diameter.

The pan stand **C** supplied is for use even with small pans.

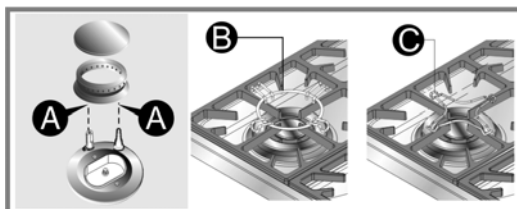

The burner it controls is shown next to each knob.

The appliance is equipped with an electronic ignition device. On some models, simply press the knob and turn it anti-clockwise to the minimum flame symbol , until the burner lights. If it does not light within the first 15 seconds, turn the knob to 0 and wait at least 60 seconds before trying to light the burner again. In models with burner ignition button, turn the knob as already described while pressing the button. On models equipped with valves, once the burner has ignited, keep the knob pressed down for a few seconds to allow the thermocouple to heat up. The burner may go out when the knob is released: this means that the thermocouple has not warmed up enough.



Wait a few moments and repeat the operation, keeping the knob pressed down for longer. This is not necessary on burners not equipped with thermocouple.



On models with thermocouple, if the burners should go out accidentally a safety device will be tripped, cutting off the gas supply even if the gas tap is open. In this case, turn the knob back to the off position and wait at least 60 seconds before trying to relight the burner.


6.2 Practical hints for using the hob burners



For better burner efficiency and to minimise gas consumption, use pans with lids of suitable size for the burner, so that flames do not reach up the sides of the pan (see point "6.3 Pan Diameters"). Once the contents come to the boil, turn down the flame far enough to prevent the liquid from boiling over. When cooking, to prevent burns or damage to the hob all pans or griddle plates must be placed inside the perimeter of the hob. All pans must have smooth, flat bottoms. Take the greatest care when using fats or oils since they may catch fire if overheated. If the flame accidentally goes out, turn off the control knob and wait at least 1 minute before trying to re-light the burner.




6.3 Pan diameters (60 cm Models)

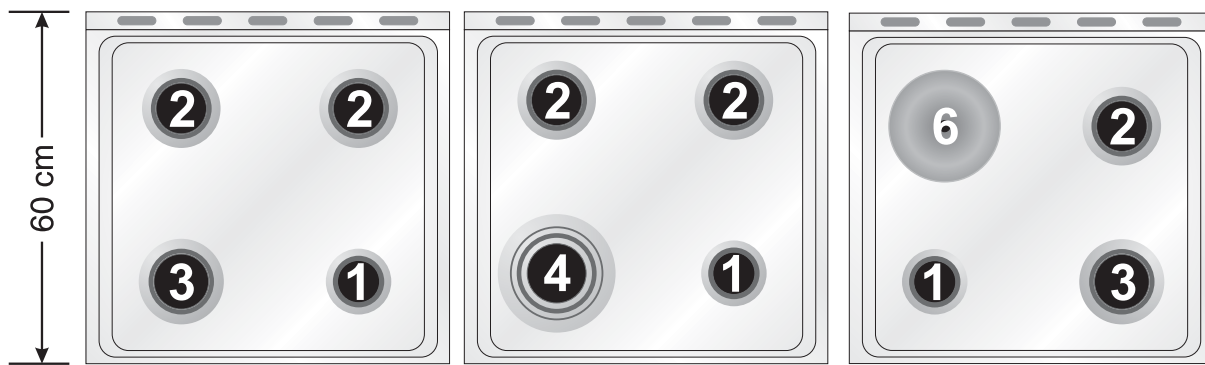

		BURNERS (50 X 50)	min. and max. Ø (in cm.)	BURNERS (60 X 60)	min. and max. Ø (in cm.)
		1. Auxiliary	12 – 14	1. Auxiliary	12 – 14
		2. Semi-rapid	16 – 22	2. Semi-rapid	16 – 24
		3.	18 – 24	3. Rapid	18 – 26
		4.		4. Triple Flame	18 – 26
		5. Rapid			

6.4 Pan diameters (90 cm Models)

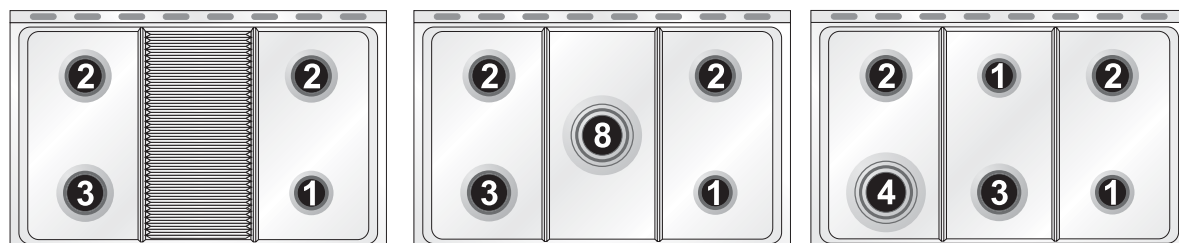

		BURNERS	min. and max. Ø (in cm.)
		1. Auxiliary	12 – 14
		2. Semi-rapid	16 – 24
		3. Rapid	18 – 26
		4. Triple Flame	18 – 26
		7. Fish	Special oval pans
		8. Triple Flame	18 - 26



Instructions for the User

6.5 Switching on the electric plate

6.5.1 Switching on the electric plates

Cookers are equipped with plates of different diameters. They are controlled by a switch and are turned on by turning the knob to the required setting. The front panel carries a screen-printed diagram above each knob indicating the plate to which it refers. A yellow pilot light indicates that the plate is on.

6.5.2 How to use the electric plates

Rapid plates offer the advantage of extremely fast cooking. The following is a guideline table of plate settings.

RAPID PLATES	HEAT SETTING	COOKING OPERATIONS POSSIBLE
0	Off	-
1	Delicate	For melting butter, chocolate, etc. For heating small amounts of liquid.
2	Gentle	For heating larger amounts of liquid.
3	Low	For defrosting frozen foods and braising, cooking at or just below boiling point.
4	Medium	For cooking foods that have to be brought to the boil, for roasting delicate meat and fish.
5	Strong	For roasts, cutlets, steaks and boiling large pieces of meat.
6	Fierce	For bringing large amounts of water to the boil, for frying.

ATTENTION

When the plate is switched on for the first time or has been out of use for a long period, it should be dried by turning it on at setting 1 for 30 minutes, to eliminate any moisture absorbed by the insulating material.

For correct use, follow these rules:

Do not switch the plate on until you have placed the pan on it.


- Use pans with thick, flat bottoms.
- Never use pans smaller than the plate.
- Dry the bottom of the pan before placing it on the plate.
- After use, to keep the electric plate in good condition and ensure its surface remains clean and shining, it must be treated with the appropriate commercial products. This necessary procedure prevents oxidation (rusting).
- Never leave the appliance unattended when cooking easily flammable foods containing oil and fat.
- The plates will remain hot even for a long time after use; do not touch them with your hands or place anything on them to prevent the risk of burns.
- Before lighting the electric plates lift the glass lid of the cooker; before closing it again, turn off all the plates and wait for them to cool.
- If you notice a crack in the surface of the plates, disconnect the appliance from the electricity supply immediately and contact your nearest authorised service centre.






7. USING THE OVEN



In models with electronic programmer, before using the oven, check that the display is showing the  symbol.

In models with analogue clock and timer knob, locate on the  symbol.

7.1 Precautions and General Advice

When the oven and grill are used for the first time, they should be heated to the maximum temperature (**260°C** for electric oven and **275°** for gas oven) for long enough to burn off any oily residues left by the manufacturing process, which might contaminate foods with unpleasant smells. After an interruption in the electricity supply, the programmer display flashes at regular intervals, showing . For setting instructions, see point "8. ELECTRONIC PROGRAMMER".



Oven accessories which may come into contact with foods are made from materials compliant with directive 89/109/EEC of 21/12/88 and relevant national regulations.



WARNING: the gas oven's door must be open when lit. The oven is fitted with a safety system which cuts out burner ignition if the door is closed. If you mistakenly attempt to light the burner with the door closed, open the door and wait a few moments before trying again.




To avoid unpleasant contact with any steam inside the oven, open the door in two stages: hold it half-open (about 5 cm) for 4-5 seconds, then open it completely. If you have to carry out any procedures on foods, leave the door open for as short a time as possible to prevent a drop in the oven temperature which will impair the cooking results.



7.2 Using the gas oven

7.2.1 Lighting the burner by hand

Completely open the oven door and turn the thermostat knob anti-clockwise. Place a lit match close to the end of the flame pipe **A** in the centre of the bottom of the oven and press the thermostat knob. Once the burner has ignited, keep the knob pressed down for a few seconds to allow the thermocouple to heat up and check that the burner has lit properly through the inspection hole **B**. The cooking temperature is set by turning the knob clockwise to the value required, between **50°** and **275°C**.

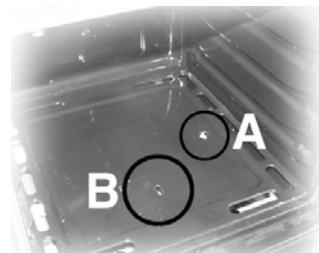

If the burner accidentally goes out, turn the knob to the off (●) position and wait at least one minute before trying to relight it.





Instructions for the User

 

GB-IE

7.3 Using the electric grill

7.3.1 Using the grill in cookers with electric oven

For short cooking procedures, such as final browning of cooked meat, select the static grill function  and turn the thermostat knob to the maximum temperature setting. The fan grill function (on some models only) allows real cooking processes to be carried out, thanks to the forced fan system that ensures the heat penetrates inside the food. For this type of cooking operation, select the fan grill function  and use the function selector knob to set the ideal cooking temperature (in all cases no more than 200°C).




7.3.2 Using the grill in cookers with gas oven

To activate this function, first turn off the oven burner by turning the knob back to  and then turn the switch to .


WARNING: THE GAS OVEN AND THE GRILL/ROTISSERIE CANNOT BE USED SIMULTANEOUSLY.



7.3.3 Operation of the grill + rotisserie


Both the static and the fan grill functions allow cooking in combination with the rotisserie. Fit the spit rod into the rotisserie bushing, select the  or  grill function or the  fan grill function and turn the thermostat knob to the temperature required. (never exceed 200° C).

7.3.4 Using the rotisserie in cookers with maxi oven

Place the rotisserie shelf on the second pair of runners from the bottom so that the rod seat projects outside the oven. Place the rod as shown in figure (1) and push the shelf into the oven until the end of the rod reaches the rotisserie motor hole. Now push the rotisserie rod to the left until it is positioned as shown in figure (2). To activate this function, press the  button.


These operations must be carried out with the oven off and cold.

After cooking, use the tool provided to remove the rod from the hole (3) and extract the shelf to bring the rotisserie rod (4) out of the oven.

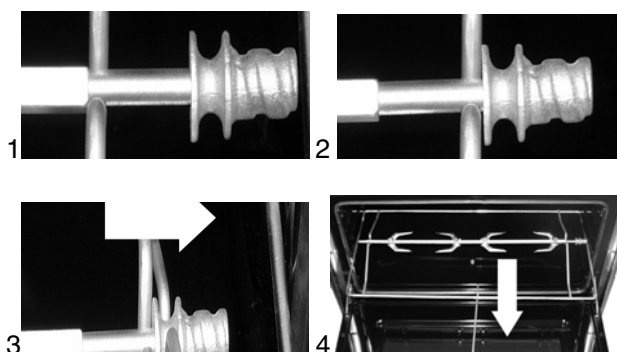

7.3.5 Using the rotisserie in cookers with normal oven

Place the rotisserie shelf "B" on the second pair of runners from the bottom and fit the rod "A" into the hole in the back of the oven.

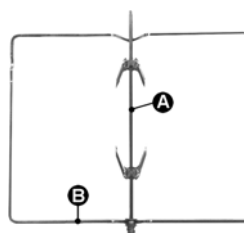

Instructions for the User



On some models the rotisserie is an optional and is not supplied as standard. It is available on request from an Authorised Service Centre.


How to use the grill



When the oven has come on (the red light comes on to confirm this), leave it to heat up for 5 minutes before placing foods inside.

Seasonings should be added to foods before cooking. Foods should also be coated with oil or melted butter before cooking. Use the oven tray to collect juice.

The foods for cooking must be placed on the oven shelf, which is then placed on one of the runners fitted in the various types of ovens, following the guidelines below:


	FOODS	SHELF ON RUNNER
	Flat, thin pieces of meat	3
	Rolled roasts	2 – 3
	Poultry	2 – 3

ATTENTION



- **Grilling processes must never last more than 60 minutes.**
- **In models with gas oven, the oven door must be half-open to the first catch during grill and grill + rotisserie cooking operations. Fit the knob guard fitted into the runners provided in the top of the oven to prevent the knobs and front panel from overheating.**
- **In models with electric oven, the oven door must be closed during grill and grill + rotisserie cooking operations.**
- **To prevent hazardous overheating, the appliance's glass lid must always be raised when using the oven or grill.**
- **Accessible parts may be very hot during and after use of the grill; keep children well away from the appliance.**
- **During rotisserie cooking operations, one of the pans supplied with the cooker should be placed on the bottom of the oven, on the bottom runners, to collect any grease and fat produced.**
- **When using the oven, remove all unused pans and shelves from its interior.**
- **During cooking, do not cover the bottom of the oven with aluminium or tin foil, and do not place pans or trays on it; this may damage the enamel coating. If you wish to use greaseproof paper, position it so that it does not interfere with the hot air circulation inside the oven.**

If your cooker is equipped with knob guard bar, when cooking using the grill or grill + rotisserie it must be fitted as shown here, fitting the rods "B" into the slots "A" in the top of the oven.

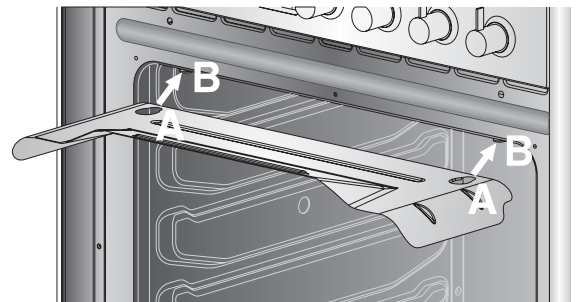





Instructions for the User


7.4 Using the gas grill


7.4.1 Lighting the gas grill burner by hand

After opening the oven door, press the knob and turn it clockwise to the grill setting  and use a match to light the burner on the top of the oven.

Once the burner has ignited, keep the knob pressed down for about 10 seconds. If the burner does not stay on after this time, release the knob and wait at least 1 minute before trying to light it again. If the burner accidentally goes out, turn the knob to the off () position and wait at least 1 minute before trying to relight it.

7.4.2 Lighting the gas grill burner using the electric ignition system

After opening the oven door, press the knob and turn it clockwise to the grill setting .

Once the burner has ignited, keep the knob pressed down for about 10 seconds. If the burner has not lit after this time, release the knob and wait at least 1 minute before trying to light it again. If the burner accidentally goes out, turn the knob to the off () position and wait at least 1 minute before trying to relight it.

In case of electricity blackout, the burner can always be lit with a match.

7.5 Storage compartment

The storage compartment is in the bottom of the cooker, underneath the oven. To open it, pull on the top of the door. Never use it to store flammable materials such as rags, paper, etc.; it is intended to take the appliance's metal accessories only.



Never open the storage compartment when the oven is on and still hot. The temperatures inside it may be very high.

7.6 Gas cylinder compartment (for the relevant models only)

The gas cylinder compartment, accessed by opening the door in the side of the cooker, can also be used as a storage compartment.

The 3 shelves shown here are not standard equipment but are available as optional accessories from Authorised Service Centres.





8. ELECTRONIC PROGRAMMER (ON SOME MODELS ONLY)



LIST OF FUNCTIONS



TIMER BUTTON



COOKING DURATION BUTTON



END OF COOKING BUTTON



VALUE DECREASE BUTTON



VALUE INCREASE BUTTON

8.1 Setting the time

When the oven is used for the first time, or after an interruption in the electricity supply, the display flashes at regular intervals, showing **0:00**. Press the and keys together, and at the same time press the value modification keys **-** or **+**: this will increase or decrease the setting by one minute for each pressure.

Press one of the two value modification keys until the current time appears.



Before each programmer setting, switch on the function and set the temperature required.

8.2 Semiautomatic cooking

This function only switches the oven off automatically at the end of the cooking time. Press the key and the display will light up showing the figures **0:00**; keep it pressed and at the same time use the value modification keys **-** or **+** to set the cooking duration.

When the key is released, the count of the programmed cooking duration will start and the display will show the current time together with the symbols **A** and .



8.3 Automatic cooking

This function switches the oven on and off in fully automatic mode.

Press the key and the display will light up showing the figures **0:00**; keep it pressed and at the same time use the value modification keys **-** or **+** to set the cooking duration.

Press the key and the display will show the sum of the current time plus the cooking duration: keep it pressed, and at the same time use the value modification keys **-** or **+** to set the cooking end time.

When the key is released, the count of the programmed cooking duration will start and the display will show the current time together with the symbols **A** and .



Instructions for the User

GB-IE




After making the setting, press the key to view the cooking time remaining; press the key to view the cooking end time. The logic prevents the setting of incompatible values (e.g. the programmer will not accept a cooking end time with a duration which is too long for this value).

8.4 End of cooking

At the end of the cooking time the oven will switch off automatically and simultaneously a buzzer will start to sound in on-off mode.

After the buzzer is stopped, the display will return to showing the current time together with the symbol, indicating that the oven is again ready for use in manual mode.

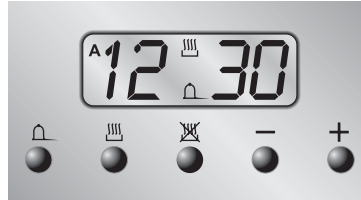

8.5 Timer

The programmer can also be used as an ordinary timer. Press the key and the display will show the figures ; keep it pressed and press the value modification keys or . When the key is released the programmed count will start and the display will show the current time and the symbol.



After making the setting, to display the time remaining press the key.
In timer mode, the system will not cut out operation of the oven at the end of the set time.

8.6 Adjusting the buzzer volume

The acoustic alarm has 3 different volume settings.

To change the setting, press the key at the end of the minute counter function with the buzzer alarm in operation.

8.7 Stopping the buzzer

The buzzer stops automatically after seven minutes. It can be stopped in manual mode by pressing the and keys together. **To switch off the oven, then return all the knobs to the 0 setting.**

8.8 Deleting the data set

With the program set, keep the key of the function for deletion depressed and at the same time scroll to the value using the value modification keys or . The timer will interpret deletion of the duration as the end of cooking.

8.9 Modifying the data set

The cooking data set can be modified at any moment by keeping the key of the function pressed and at the same time pressing the value modification keys or .



9. DIGITAL TIMER (ON SOME MODELS ONLY)

This device sounds an on-off buzzer at the end of the set cooking time. It therefore offers timer functions only, and is not a programmer.



LIST OF FUNCTIONS



TIME SETTING BUTTON



VALUE DECREASE BUTTON



VALUE INCREASE BUTTON

9.1.1 Setting the time

When the oven is used for the first time, or after an interruption in the electricity supply, the display flashes at regular intervals, showing 0:00. Press the key and use the or keys to set the current time.

9.1.2 Setting the timer

To set the timer, press the key and keep it pressed until the minutes required appear. About 5 seconds after the key is released, the countdown will start; when it finishes, the buzzer will sound in on-off mode.

During the countdown, the symbol will appear on the display and when the key is pressed the current time is displayed for 5 seconds.

9.1.3 Stopping the buzzer

The buzzer stops automatically after seven minutes. It can be stopped in manual mode by pressing the key.

9.1.4 Adjusting the buzzer volume

The buzzer volume can be varied (3 settings) while it is in operation by pressing the key.

9.1.5 Modifying the data set

The timer data set can be modified at any moment by pressing the or keys.

10. ANALOGUE CLOCK (ON SOME MODELS ONLY)

To set the mechanical timer, turn the knob clockwise.

The setting range is from 0 to 55 minutes. At the end of the cooking time, a buzzer will sound; to stop it use the knob to turn the outside sector to the setting.

To set the clock, pull the knob and turn it clockwise.





Instructions for the User

GB-IE

11. CLEANING AND MAINTENANCE

11.1 Cleaning enamel



To keep enamel in good condition, it must be cleaned regularly, after each use of the cooker, after allowing it to cool.

11.1.1 Routine daily cleaning

When cleaning and caring for enamelled surfaces always use **only** specific products which do not contain abrasives or chlorine-based acids.

Instructions for use: pour the product onto a damp cloth and wipe over the surface, then rinse thoroughly and dry with a soft cloth or chamois leather.

11.1.2 Food stains or spills

Never use metal scouring pads or sharp scrapers which will damage the surface.

Use ordinary non-abrasive products with the aid of wooden or plastic utensils if necessary. Rinse thoroughly and dry with a soft cloth or chamois leather.

Do not allow spills of foods with high sugar content (e.g. jam) to dry inside the oven. If they dry for too long, they might damage the enamel coating of the inside of the oven.




11.2 Cleaning the hob components

11.2.1 The glass lid


The lid can be taken off its hinges for easier cleaning.

- 1- open the lid;
- 2- undo the screws on the back of the two hinges (indicated by the arrows here) and lift it off.

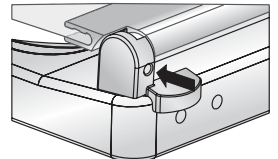

If liquids are spilt onto the closed lid, wipe them off carefully with a cloth before opening it.

To replace the lid, fit it into the guides and screw in the hinge fixing screws with the lid open.

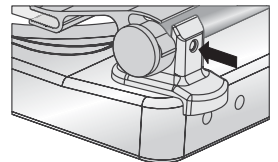

Take care not to touch the glass of the lid with still-hot pots and pans. The strong heat might crack the glass

Instructions for the User



11.2.2 The pan stands

Remove the pan stands and wash them in warm water with a non-abrasive detergent, taking care to remove all deposits. Put them back on the hob.


The continuous contact between the pan stands and the flame may cause deterioration in the enamel in the areas exposed to heat over time. This is an absolutely natural phenomenon which does not impair this component's operation at all.

11.2.3 The burner caps and flame diffuser rings

The burner caps and flame diffuser rings can be removed for easier cleaning; wash them in hot water and non-abrasive detergent, taking care to remove all deposits, and wait for them to **dry completely**.




WARNING: never wash these components in the dishwasher. They may be left to soak in hot water and detergent.

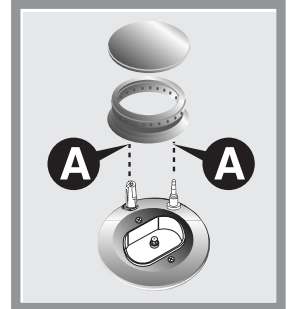

Replace the flame diffuser rings, checking that they are correctly in place with their respective burner caps, making sure that the holes **A** in the flame diffusers are aligned with the plugs and thermocouples.

11.2.4 The plugs and thermocouples


For best performance, on the relevant models the ignition plugs and thermocouples must always be kept thoroughly clean. Check them frequently and if necessary clean them with a wet cloth. Remove any dry residues with a wooden toothpick or a needle.

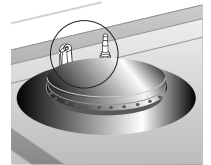

11.3 Cleaning the oven



To keep the oven in good condition, it must be cleaned regularly, after allowing it to cool down. Remove all removable parts.

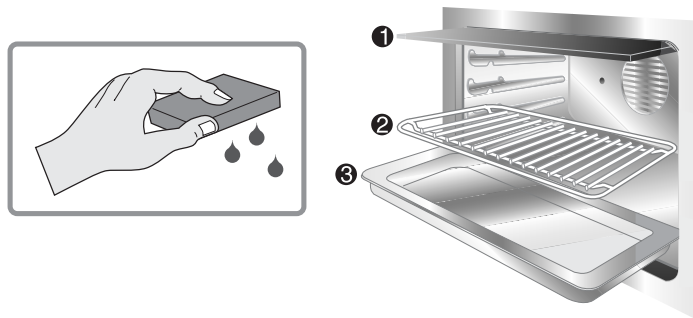

Clean the oven shelves with hot water and non-abrasive detergents, rinse and dry.

11.4 Door glazing

The glass in the door should always be kept thoroughly clean. Use absorbent kitchen roll; remove stubborn dirt with a damp sponge and ordinary detergent.




Instructions for the User

GB-IE

12. EXTRAORDINARY MAINTENANCE

Occasionally, the oven will require minor servicing procedures or the replacement of parts subject to wear and tear, such as gaskets, light bulbs, etc. The specific operations for each procedure of this kind are provided below.

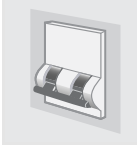

Before carrying out any operation involving access to live parts, disconnect the appliance from the electricity supply.

12.1 Lubricating the gas oven taps and thermostat




Over time, the gas taps and thermostat of the gas oven may become stiff or jam. Clean their insides and change their lubricating grease.

This operation must be carried out by a skilled technician.

12.2 Changing the light bulb


Remove the protective cover **A** by unscrewing it anti-clockwise and replace the bulb **B** with another of the same type (25 W). Replace the protective cover **A**.

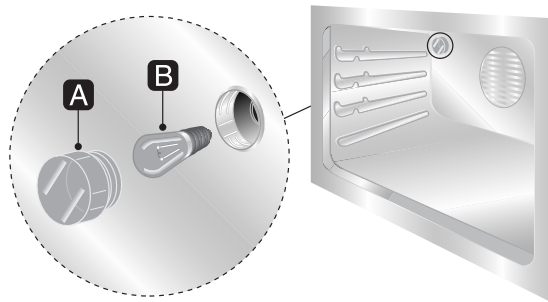

Use only light bulbs approved for ovens (T 300°C).

12.3 Removing the door

Lift the levers **B** and take hold of the two sides of the door with both hands close to the hinges **A**. Raise the door to an angle of about 45° and remove it. To reassemble, fit the hinges **A** into their grooves, then lower the door into place and engage the levers **B**.

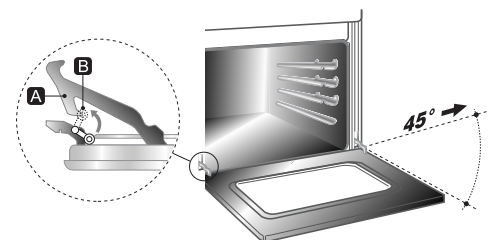

12.4 Removing the gasket

To allow thorough cleaning of the oven, the door gasket can be removed. Before removing the gasket, remove the oven door as described above. Once the door has been removed, lift the tangs at the corners as shown on the right.

